

- 1. Lift/Support Vehicle
- 2. Remove Negative Battery Cable
- 3. Remove Shifter
- 4. Remove Exhaust
- 5. Drain Transmission Fluid
- 6. Disconnect Driveshaft
- 7. Remove Starter
- 8. Remove/Set Aside Wiring Harness
- 9. Unbolt Transmission Mount
- 10. Unbolt/Remove Transmission